



711215
Plate coupe
W: 5.9"
Case Pack: 36

T701217
Plate flat coupe
W: 6.7"
Case Pack: 36

711220
Plate coupe
W: 8.0"
Case Pack: 36

711226
Plate coupe
W: 10.3"
Case Pack: 24

711228
Plate coupe
W: 11.1"
Case Pack: 12

T701230
Plate flat coupe
W: 11.8"
Case Pack: 12

711232
Plate coupe
W: 12.5"
Case Pack: 12



711424
Plate 1/2 deep coupe
W: 9.4"
C: 22.0 oz
Case Pack: 24

711428
Plate 1/2 deep coupe
W: 11.1"
C: 29.4 oz
Case Pack: 12

711431
Plate 1/2 deep coupe
W: 12.1"
C: 40.6 oz
Case Pack: 12



711318
Plate deep coupe
W: 7.1"
C: 17.6 oz
Case Pack: 24

711324
Plate deep coupe
W: 9.4"
C: 33.8 oz
Case Pack: 24

711330
Pasta Bowl round
W: 11.9"
C: 57.5 oz
Case Pack: 12



712726 ✱
Cream Soup Cup,
use saucer 716918, 717118
W: 4.1"
C: 8.8 oz
Case Pack: 36



715317
formerly 195317
Mug 6.5 oz,
use saucer 716915
W: 2.8"
C: 6.4 oz
Case Pack: 36



715176
Cup, use saucer
716918, 717118
W: 4.1"
C: 8.8 oz
Case Pack: 36

715190 ✱
Cafe au Lait Cup,
use saucer 716940, 706885
W: 4.7"
C: 14.5 oz
Case Pack: 36



NEW
715315 ✱
Tea cup - no handle
W: 3.4"
C: 5.1 oz
Case Pack: 36



715159
Demitasse Cup,
use saucer 716909, 717009,
706859
W: 2.4"
C: 3.0 oz
Case Pack: 36

715168 ✱
Cup, use saucer
716918, 717118
W: 3.0"
C: 6.1 oz
Case Pack: 36

715172 ✱
Cup, use saucer
716918, 717118
W: 3.0"
C: 7.4 oz
Case Pack: 36



711511
Plate coupe triangle
W: 4.4"
Case Pack: 36

711520
Plate coupe triangle
W: 8.1"
Case Pack: 36

711525
Plate coupe triangle
W: 10.4"
Case Pack: 24

711532
Plate coupe triangle
W: 11.8"
Case Pack: 12



711915
Plate coupe square
W: 5.9"
Case Pack: 36

711920
Plate coupe square
W: 8.5"
Case Pack: 24

711927
Plate coupe square
W: 10.7"
Case Pack: 24

711932
Plate coupe square
W: 12.6"
Case Pack: 12



717227
Plate-coup square w/centerwell
W: 10.7"
Case Pack: 24

717232
Plate-coup square w/centerwell
W: 12.8"
Case Pack: 12



715626 ✱
Cup, use saucer 716918,
717118
W: 3.0"
C: 8.8 oz
Case Pack: 36

715628 ✱
Cup, use saucer 716918,
717118
W: 3.0"
C: 9.5 oz
Case Pack: 36



725172 ✱
Cup, use saucer 716918
W: 4.1"
C: 7.4 oz
Case Pack: 36



716915
formerly 196915
Saucer
W: 5.8"
Case Pack: 36



717009
Saucer triangle
W: 4.4"
Case Pack: 36



716909
Demitasse Saucer
W: 4.7"
Case Pack: 36

716918 ✱
Saucer
W: 5.9"
Case Pack: 36

716940
Saucer
W: 7.5"
Case Pack: 36



717118 ✱
Saucer square
W: 5.9"
Case Pack: 36



NEW
717900
Porcelain spoon
L: 5.1"
Case Pack: 36



714605
Creamer
W: 2.2"
C: 1.7 oz
Case Pack: 36



NEW
717901
Chop stick rest
L: 2.5"
Case Pack: 36



714715
Creamer
W: 3.8"
C: 5.1 oz
Case Pack: 36



712314
Platter coupe rectangle
W: 5.5" D: 3.7"
Case Pack: 36

712328
Platter coupe rectangle
W: 10.9" D: 7.2"
Case Pack: 24

712332
Platter coupe rectangle
W: 12.6" D: 9.1"
Case Pack: 12

712336
Platter coupe rectangle
W: 14.2" D: 9.1"
Case Pack: 12



712341
Platter coupe rectangle
W: 16.3" D: 8.3"
Case Pack: 12



712632
Gourmet Platter
use 713016 for bowl
W: 12.5"
Case Pack: 12



711630
Pasta Bowl triangular
W: 11.2"
C: 38.2 oz
Case Pack: 12



713810
Oval Sauce Boat
W: 4.3"D: 2.4"
C: 2.7 oz
Case Pack: 36



713364
Oval Sauce Boat
W: 5.6"D: 3.3"
C: 9.1 oz
Case Pack: 24



714001
Egg Cup,
use saucer 716909, 717009,
097010
W: 2.0"
Case Pack: 36



714010
Salt Shaker
H: 4"
Case Pack: 36

714020
Pepper Shaker
H: 4"
Case Pack: 36



711830
Pasta Bowl square
W: 11.9"
C: 35.8 oz
Case Pack: 12



713014
Salad Bowl
W: 5.6"
C: 10.8 oz
Case Pack: 36

713016
Salad Bowl fits 712632
W: 6.5"
C: 17.2 oz
Case Pack: 36



716526 ✱
Bowl
use saucer 716918, 717188
W: 4.1"
C: 8.8 oz
Case Pack: 36



712826
formerly 192826
Cream Soup Cup stackable,
use saucer 716915
W: 5.6"
C: 9.1 oz
Case Pack: 36



717700
Candle Holder
H: 4.7"
Case Pack: 36



718100
Flower Vase
H: 6"
Case Pack: 36



714130
Coffeepot
W: 5"
C: 10.1 oz
Case Pack: 12



714335
Teapot
W: 6.0"
C: 11.8 oz
Case Pack: 24